
USER ADJUSTMENT GUIDE



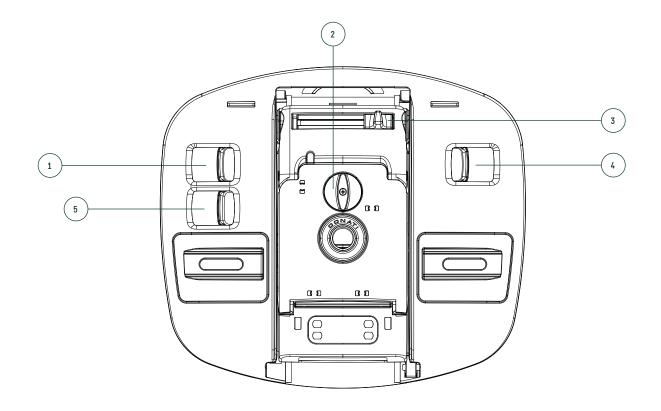

1 - HEIGHT ADJUSTMENT LEVER

To raise

With the right hand, pull handle outwards while taking your weight off chair

To lower

With the right hand, pull handle outwards while seated



2 - TENSION ADJUSTMENT KNOB

To increase

Rotate knob clockwise

To decrease

Rotate knob counterclockwise



3 - SEAT ANGLE ADJ. LEVER

To bring the seat angle at 0° With the hand, move lever left

To bring the seat angle to -4° With the hand, move lever right

PRODUCT NAME

Friendly 3 Plus

TVPF

Weight activated mechanism

FEATURES

Height adjustment

7

Comfort fine-tuning

_

Seat angle adjustment

Tilt lock

Seat depth adjustment



4 - TILT LOCK / UNLOCK LEVER

To lock tilt recline

Bring the backrest to the desired position using your body weight and, with the left hand, pull lever outwards

To unlock tilt recline

With the left hand, pull lever outwards and unlock the tilt using your body weight



5 - SEAT DEPTH ADJ. LEVER

To move forward / backward

With the right hand, pull handle outwards and, using your body weight, bring the seat to the desired position