



1 - HEIGHT ADJUSTMENT LEVER

To raise

With the right hand, pull handle outwards while taking your weight off chair

—

To lower

With the right hand, pull handle outwards while seated



2 - TILT LOCK / UNLOCK LEVER

To lock tilt recline

Bring the backrest to the desired position using your body weight and, with the left hand, pull lever outwards

—

To unlock tilt recline

With the left hand, pull lever outwards and unlock the tilt using your body weight



3 - TENSION ADJUSTMENT KNOB

To increase

Rotate knob clockwise

—

To decrease

Rotate knob counterclockwise



4 - SEAT DEPTH ADJ. LEVER

To move forward / backward

With the right hand, pull handle outwards and, using your body weight, bring the seat to the desired position

PRODUCT NAME
D109 Cable

TYPE
Weight activated mechanism

FEATURES
Height adjustment
—
Comfort fine-tuning
—
Tilt lock
—
Seat depth adjustment