



1 - HEIGHT ADJUSTMENT LEVER

To raise

With the right hand, pull lever up while taking your weight off chair

—

To lower

With the right hand, pull lever up while seated



2 - TILT LOCK / UNLOCK BUTTON

To lock tilt recline

Bring the backrest to the desired position using your body weight and, with your right hand, push button inwards

—

To unlock tilt recline

With the right hand, pull button outwards and unlock the tilt using your body weight

PRODUCT NAME

D109 EL

TYPE

Weight activated mechanism

FEATURES

Height adjustment

—

Tilt lock