



1 - HEIGHT ADJUSTMENT LEVER

To raise

With the right hand, pull lever up while taking your weight off chair

—

To lower

With the right hand, pull lever up while seated



2 - TILT LOCK / UNLOCK LEVER

To lock tilt recline

Bring the backrest to the desired position using your body weight and, with the left hand, push lever down

—

To unlock tilt recline

With the left hand, pull lever up and unlock the tilt using your body weight



3 - TENSION ADJUSTMENT KNOB

To increase

Rotate knob clockwise

—

To decrease

Rotate knob counterclockwise



4 - SEAT ANGLE ADJ. LEVER

To lock the seat (0° / -5°)

With the right hand, rotate lever forwards

—

To unlock the seat (Free float)

With the right hand, rotate lever backwards

PRODUCT NAME

Epron Flex

TYPE

Synchro tilt mechanism

FEATURES

Height adjustment

—

Comfort adjustment

—

Tilt lock

—

Seat angle adjustment