



1 - HEIGHT ADJUSTMENT LEVER

To raise

With the right hand, pull lever up while taking your weight off chair

—

To lower

With the right hand, pull lever up while seated



2 - TILT LOCK / UNLOCK LEVER

To lock tilt recline

Bring the backrest to the desired position using your body weight and, with the left hand, push lever down

—

To unlock tilt recline

With the left hand, pull lever up and unlock the tilt using your body weight



3 - SEAT ANGLE ADJ. LEVER

To lock the seat

Bring the seat to the desired position and, with the right hand, push lever down

—

To unlock the seat

With the right hand, pull lever up



4 - TENSION ADJUSTMENT CRANK

To increase

With the right hand, extract crank and rotate it forwards

—

To decrease

With the right hand, extract crank and rotate it backwards

PRODUCT NAME

**Epron Plus
Asynchron**

TYPE

**Meccanismo
asincrono**

FEATURES

Height adjustment

—

Comfort adjustment

—

Tilt lock

—

**Seat angle
adjustment**