



### 1 - HEIGHT ADJUSTMENT LEVER

#### To raise

With the right hand, pull lever up while taking your weight off chair

—

#### To lower

With the right hand, pull lever up while seated



### 2 - TILT LOCK / UNLOCK LEVER

#### To lock tilt recline

Bring the backrest to the desired position using your body weight and, with the left hand, push lever down

—

#### To unlock tilt recline

With the left hand, pull lever up and unlock the tilt using your body weight



### 3 - SEAT ANGLE ADJ. LEVER

#### To lock the seat (0° / -5°)

With the right hand, rotate lever forwards

—

#### To unlock the seat (Free float)

With the right hand, rotate lever backwards



### 4 - TENSION ADJUSTMENT CRANK

#### To increase

With the right hand, extract crank and rotate it forwards

—

#### To decrease

With the right hand, extract crank and rotate it backwards

#### PRODUCT NAME

**Epron Plus Flex**

#### TYPE

**Synchro tilt mechanism**

#### FEATURES

**Height adjustment**

—

**Comfort adjustment**

—

**Tilt lock**

—

**Seat angle adjustment**