



1 - HEIGHT ADJUSTMENT LEVER

To raise

With the right hand, pull lever up while taking your weight off chair

—

To lower

With the right hand, pull lever up while seated



2 - SEAT ANGLE ADJ. LEVER

To bring the seat angle at 0°

With the right hand, rotate lever forwards

—

To bring the seat angle to -4°

With the right hand, rotate lever backwards



3 - TILT LOCK / UNLOCK KNOB

To lock tilt recline

Bring the backrest to the desired position using your body weight and, with the left hand, rotate knob forwards

—

To unlock tilt recline

With the left hand, rotate knob backwards and unlock the tilt using your body weight



4 - TENSION ADJUSTMENT KNOB

To increase

With the right hand, rotate knob forwards

—

To decrease

With the right hand, rotate knob backwards

PRODUCT NAME

**Epron RV Seat
angle adjustment**

TYPE

**Synchro tilt
mechanism**

FEATURES

Height adjustment

—

Comfort adjustment

—

Tilt lock

—

**Seat angle
adjustment**