
USER ADJUSTMENT GUIDE



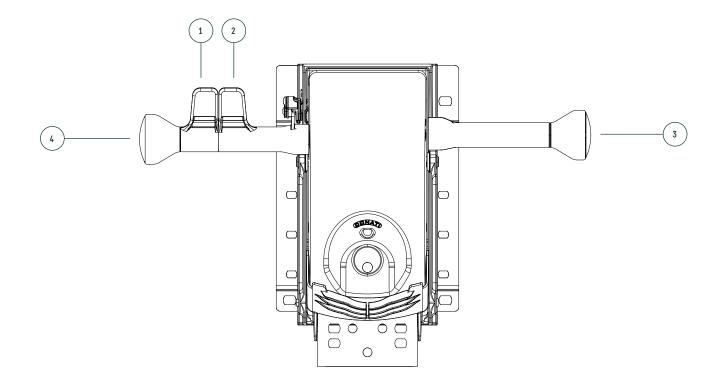

1 - HEIGHT ADJUSTMENT LEVER

To raise

With the right hand, pull lever up while taking your weight off chair

To lowe

With the right hand, pull lever up while seated



2 - SEAT DEPTH ADJ. LEVER

To move forward / backward

With the right hand, pull lever up and, using your body weight, bring the seat to the desired position



3 - TILT LOCK / UNLOCK KNOB

To lock tilt recline

Bring the backrest to the desired position using your body weight and, with the left hand, rotate knob forwards

To unlock tilt recline

With the left hand, rotate knob backwards and unlock the tilt using your body weight

PRODUCT NAME

Epron RV Trasla

TVPF

Synchro tilt mechanism

FEATURES

Height adjustment

=

Comfort adjustment

Tilt lock

Seat depth adjustment



4 - TENSION ADJUSTMENT KNOB


To increase

With the right hand, rotate knob forwards

To decrease

With the right hand, rotate knob backwards

USER ADJUSTMENT GUIDE

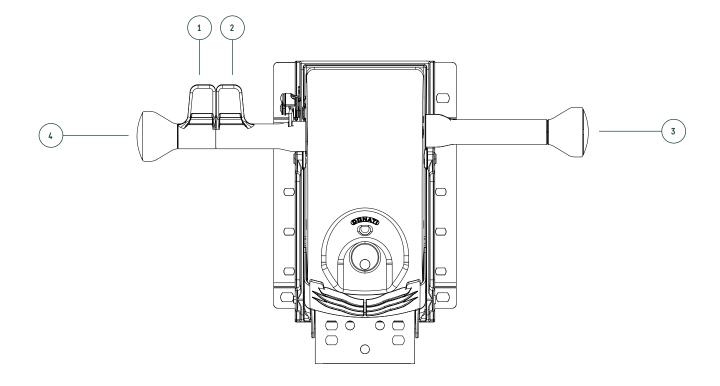



1 - HEIGHT ADJUSTMENT LEVER

To raise

With the right hand, pull lever up while taking your weight off chair

To lowe

With the right hand, pull lever up while seated



2 - SEAT DEPTH ADJ. LEVER

To move forward / backward

With the right hand, pull lever up and, using your body weight, bring the seat to the desired position



3 - TRAVEL RESTRICTION KNOB

To decrease tilt range

With the left hand, rotate knob forwards

To increase tilt range

With the left hand, rotate knob backwards

PRODUCT NAME

Epron RV Synchron

TYPE

Synchro tilt mechanism

FEATURES

Height adjustment

Comfort adjustment

Travel restriction

Seat depth adjustment



4 - TENSION ADJUSTMENT KNOB

To increase

With the right hand, rotate knob forwards

To decrease

With the right hand, rotate knob backwards