



1 - HEIGHT ADJUSTMENT LEVER

To raise

With the right hand, pull lever up while taking your weight off chair

—

To lower

With the right hand, pull lever up while seated



2 - TILT LOCK / UNLOCK LEVER

To lock tilt recline

Bring the backrest to the desired position using your body weight and, with the left hand, push lever down

—

To unlock tilt recline

With the left hand, pull lever up and unlock the tilt using your body weight



3 - TENSION ADJ. HEX-SCREW

To increase

Insert the hex-key into the designated hole and rotate it clockwise

—

To decrease

Insert the hex-key into the designated hole and rotate it counterclockwise

PRODUCT NAME

Epron Solo

TYPE

Synchro tilt mechanism

FEATURES

Height adjustment

—

Comfort fine-tuning

—

Tilt lock