
DONATI



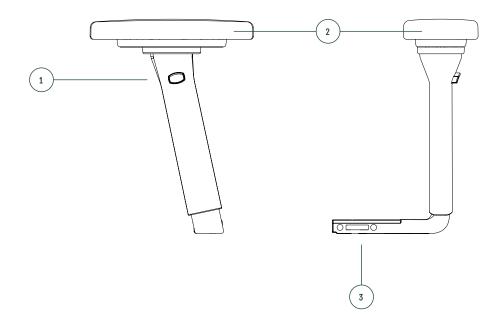

1 - ARMREST HEIGHT ADJUSTMENT BUTTON

To raise

Push button and pull arm up to desired height

To lower

Push button and pull arm down to desired height



2 - PAD WIDTH / DEPTH ADJUSTMENT SYSTEM

To adjust depth

Push PAD forward or back to desired position

To adjust width

Pull PAD in or push out



3 - ARMREST WIDTH ADJUSTMENT SYSTEM

To unlock

Loose the provided fixing system (lever / screw)

To lock

Tighten the provided fixing system (lever / screw)

PRODUCT NAME BeO 4D 12°

Adjustable armrest

FEATURES *


Armrest height adjustment


Armrest width adjustment

Pad width / depth adjustment

(*) THE FEATURES MAY DIFFEL ACCORDING TO THE TYPE OF

USER ADJUSTMENT GUIDE

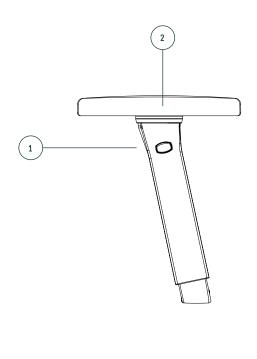

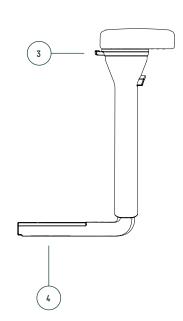



1 - ARMREST HEIGHT ADJUSTMENT BUTTON

To raise

Push button and pull arm up to desired height

To lower

Push button and pull arm down to desired height



2 - PAD DEPTH ADJUSTMENT SYSTEM

To move forward

Push PAD forward or back to desired position

To move backward

Pull PAD in or push out



3 - PAD WIDTH ADJUSTMENT BUTTON

To adjust

Push button and rotate the PAD to the desired position

PRODUCT NAME

BeO 4D 12° with rotating PAD and position lock

Adjustable armrest

FEATURES *

Armrest height adjustment

Armrest width adjustment

PAD rotation

PAD depth adjustment

4 - ARMREST WIDTH ADJUSTMENT SYSTEM

To unlock

Loose the provided fixing system (lever / screw)

To lock

Tighten the provided fixing system (lever / screw)