
# DONATI



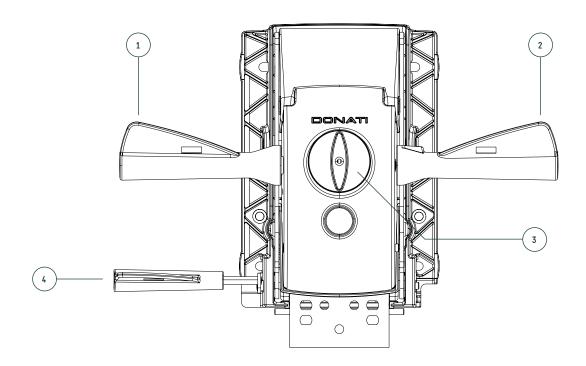

#### 1 - HEIGHT ADJUSTMENT LEVER

# To raise

With the right hand, pull lever up while taking your weight off chair

#### To lowe

With the right hand, pull lever up while seated



#### 2 - TILT LOCK / UNLOCK LEVER

# To lock tilt recline

Bring the backrest to the desired position using your body weight and, with the left hand, pull lever up

# To unlock tilt recline

With the left hand, push lever down and unlock the tilt using your body weight



#### 3 - TENSION ADJUSTMENT KNOB

# To increase

Rotate knob clockwise

#### To decrease

Rotate knob counterclockwise

# PRODUCT NAME

D109 Flex

#### TYPE

Weight activated mechanism

## FEATURES

**Height adjustment** 

-

**Comfort fine-tuning** 

**Tilt lock** 

\_

Seat angle adjustment




#### 4 - SEAT ANGLE ADJ. LEVER

# To lock the seat (0° / -5°)

With the right hand, rotate lever forwards

# To unlock the seat (Free float)

With the right hand, rotate lever backwards

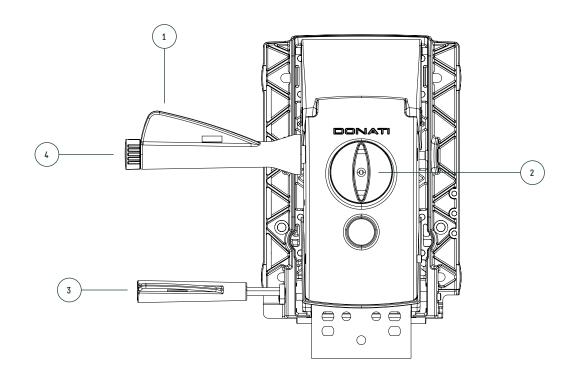



### 1 - HEIGHT ADJUSTMENT LEVER

# To raise

With the right hand, pull lever up while taking your weight off chair

#### To lower

With the right hand, pull lever up while seated



# 2 - TENSION ADJUSTMENT KNOB

# To increase

Rotate knob clockwise

#### To decrease

Rotate knob counterclockwise



# 3 - SEAT ANGLE ADJ. LEVER

# To lock the seat (0° / -5°)

With the right hand, rotate lever forwards

# To unlock the seat (Free float)

With the right hand, rotate lever backwards

# PRODUCT NAME

D109 Flex and travel restriction

#### TYPE

Weight activated mechanism

#### FEATURES

Height adjustment

**Comfort fine-tuning** 

Travel restriction

\_

Seat angle adjustment



#### 4 - TRAVEL RESTRICTION KNOB

## To decrease tilt range

With the right hand, rotate knob forwards

# To increase tilt range

With the right hand, rotate knob backwards