
DONATI



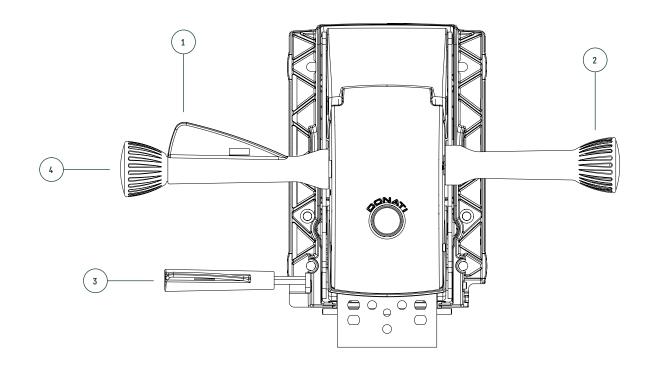

1 - HEIGHT ADJUSTMENT LEVER

To raise

With the right hand, pull lever up while taking your weight off chair

With the right hand, pull lever up while seated



2 - TILT LOCK / UNLOCK KNOB

To lock tilt recline

Bring the backrest to the desired position using your body weight and, with the left hand, rotate knob forwards

To unlock tilt recline

With the left hand, rotate knob backwards and unlock the tilt using your body weight



3 - SEAT ANGLE ADJ. LEVER

To lock the seat (0° / -5°)

With the right hand, rotate lever forwards

To unlock the seat (Free float)

With the right hand, rotate lever backwards



Inedito Flex

Weight activated mechanism

FEATURES

Height adjustment

Comfort fine-tuning

Tilt lock

Seat angle adjustment



4 - TENSION ADJUSTMENT KNOB

To increase


With the right hand, rotate knob forwards

To decrease

With the right hand, rotate knob

backwards

DONATI

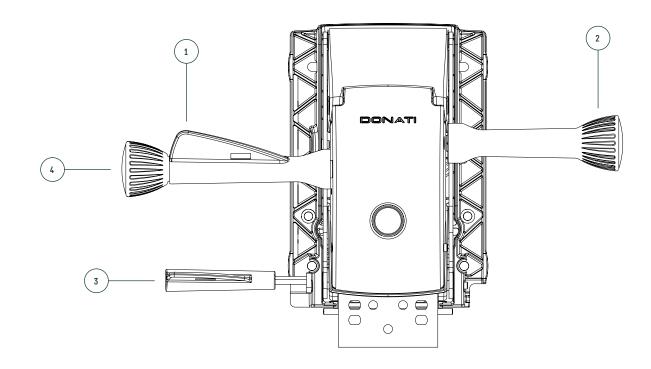



1 - HEIGHT ADJUSTMENT LEVER

To raise

With the right hand, pull lever up while taking your weight off chair

To lowe

With the right hand, pull lever up while seated



2 - TRAVEL RESTRICTION KNOB

To decrease tilt range

With the left hand, rotate knob forwards

To increase tilt range

With the left hand, rotate knob backwards



3 - SEAT ANGLE ADJ. LEVER

To lock the seat (0° / -5°)

With the right hand, rotate lever forwards

To unlock the seat (Free float)

With the right hand, rotate lever backwards

PRODUCT NAME

Inedito Flex and travel restriction

TYPE

Weight activated mechanism

FEATURES

Height adjustment

Comfort fine-tuning

Travel restriction

--Seat angle adjustment



4 - TENSION ADJUSTMENT KNOB

To increase

With the right hand, rotate knob forwards

To decrease

With the right hand, rotate knob backwards

16/10/19